




QUICK PROGRAMMING GUIDE FOR ALL SOMFY® RTS MOTORS

INCLUDES USER PROGRAMMING INSTRUCTIONS AND INSTALLER INSTRUCTIONS

WARNING

UPPER LIMITS HAVE BEEN PRE-SET AT THE FINISHING FACILITY.
ADJUSTING THE UPPER LIMITS ANY HIGHER MAY CAUSE DAMAGE TO YOUR SHADE.

CONTROLS KEY

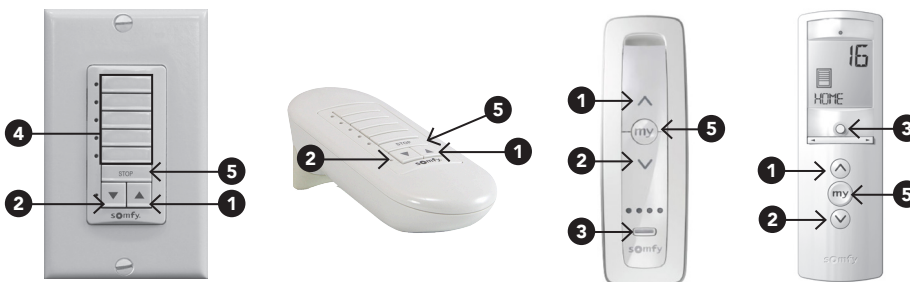

- 1 UP Button

- 2 DOWN Button

- 3 Channel Selector Button
All four lights will illuminate when fifth channel is activated.

- 4 Channel selected by pressing channel buttons. LED will illuminate when selected.

- 5 STOP / my Button
Stops a moving shade and programs a desired intermediate position.

USER INSTRUCTIONS

ADJUSTING THE LIMITS IN USER MODE



To change LOWER limit

Send the shade to its pre-set lower limit.

Step 1: Press both and at the same time until the shade jogs. (A jog is a brief up and down motion)

Step 2: Adjust to the desired lower limit.

Step 3: Press / until the shade jogs.



To change UPPER limit

Send the shade to its pre-set upper limit.

Step 1: Press both and at the same time until the shade jogs.

Step 2: Adjust to the desired upper limit.

Step 3: Press / until the shade jogs.





USER INSTRUCTIONS (CONT.)



To Set an Intermediate Position

Move the shade and stop it at the desired intermediate position by pressing **my** / **STOP**.

Once the desired intermediate position is reached, press and hold **my** / **STOP** until the shade jogs. The intermediate position is now added to memory.



NOTE

If shade is actively moving, press **my** / **STOP** twice.

To delete: Activate shade to **my** intermediate position, then press and hold **my** / **STOP** for 5 seconds. Shade will jog to confirm deletion.

INSTALLER INSTRUCTIONS

PROGRAMMING

Before you begin


Steps 1-7 must be completed to ensure proper shade programming and functionality. It is recommended to power only the motor being programmed (disconnect power to all other motors). Motor will exit programming mode after 2 minutes of inactivity.

Step 1: Connect power

With the motor installed in the shade, connect power to the motor (120V, 24V or 12V transformer or 12V battery wand).

NOTE

Sonesse 30 Wirefree: Press the motor head programming button to wake up the motor. The shade jogs and the transmitter commands are enabled.

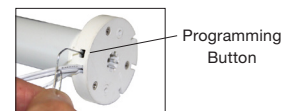

Step 2: Initiate programming

Select a channel on the Remote. Press both **▲** and **▼** at the same time until the shade jogs. The shade is now in programming mode.



Step 3: Check directions

Press **▲** or **▼**. When pressing **▼** shade should go down.

To change direction press and hold **my** / **STOP** until the shade jogs.



INSTALLER INSTRUCTIONS (CONT.)

PROGRAMMING

Step 4: Set UPPER limits



Bring the shade to desired upper limit. Press both **my** / **STOP** and **↓** until the shade moves, then release. (If the shade stops when the buttons are released, take it back to the upper limit and repeat). Stop the shade when reaching the desired lower limit. You can adjust by pressing **↑** or **↓**.



Step 5: Set LOWER limits

Bring the shade to the desired lower limit. Press both **my** / **STOP** and **↑** at the same time until the shade moves, then release. The shade will stop at the original upper limit.



Step 6: Confirm limits settings

Press and hold **my** / **STOP** until the shade jogs. (A jog is a brief up and down motion)



Step 7: Finalizing

Using a paperclip, briefly press or tap the programming button until the shade jogs. The shade is now back in user mode. Double check the limit settings as a precaution.

Step 8: Disconnect power from motors that are programmed on multiple channels.

NOTE

Sonesse 30 Wirefree: To enable sleep mode press and hold the motor head programming button until the shade jogs. Then briefly press the motor head programming button again. The shade will jog twice. Sleep mode is now activated. To deactivate sleep mode press the programming button or wait 15 minutes.

ADDING OR DELETING A TRANSMITTER OR CHANNEL

CREATE GROUPS BY ADDING MULTIPLE MOTORS TO THE SAME CHANNEL



Copy existing program

If using an already programmed transmitter, select the transmitter (single channel) or the channel (1-5) of a multi-channel transmitter. Press and hold the programming button until the shade jogs.



Paste copied program to new remote or channel

Select the transmitter (single channel) or the channel (1-5) of a multi-channel transmitter to be added or deleted. Briefly press or tap the programming button until the shade jogs.

Programming Button

Programming Button

Programming Button

Programming Button



PROCEDURE FOR WORKING WITH MOTORS


TO RESET OR DELETE ALL PREVIOUS SETTINGS

Using a paperclip (if required), press and hold the program button located on each respective motor (shown below) for approximately 12 seconds, or until the shade jogs 3 separate times. All programmed remotes and limit settings will be erased. Motor is now reset to factory mode. Motor limits will need to be re-established.


Sonesse 30




Sonesse 30 Wirefree

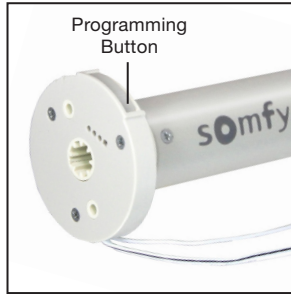

Motor Clutch

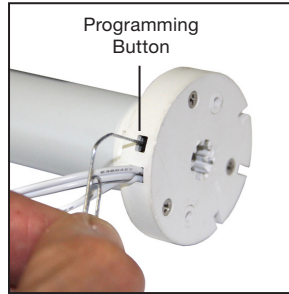

Sonesse ULTRA 50 DC RTS

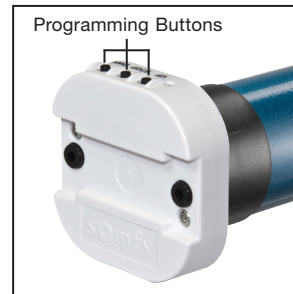

PROCEDURE FOR RESETTING LINE VOLTAGE 120V AC MOTORS— SONESSE 50 ULTRA AC & SONESSE 40/50 RTS

PERFORM A DUAL POWER CUT TO DELETE ALL PREVIOUS SETTINGS (STEPS 1 - 4)



Step 1

Unplug power for
2 Seconds



Step 2

Plug power in for
10 Seconds



Step 3

Unplug power for
2 Seconds



Step 4

Plug power in and
shade starts to move



Step 5

When the shade stops, press and hold the programming button on your hand-held or wall remote until the shade jogs twice. Do not release the programming button until the jogging is complete or you will have to start the power cut sequence again.