

SAFETY DEVICE Installation Instructions

Shades should not be operated without the installation of the provided safety devices detailed below. Anchoring devices to the wall or window casing, and proper usage, reduces the hazards of strangulation and entanglement of young children and pets by limiting access to the control loop.




Hold Down for Clutch with Control Loop

OLD STYLE SHADES

1 Pull tension device downward until control loop is taut. Do not twist or cross the loop. Then, move the tension device up approximately $\frac{1}{8}$ " to relieve stress on control loop.

2 With flat side of tension device flush against the wall or window casing, install device on outside mount bracket with the two long wood screws.

Outside Mount: First secure tension device to angle bracket with the two short screws, then follow steps 1 & 2.

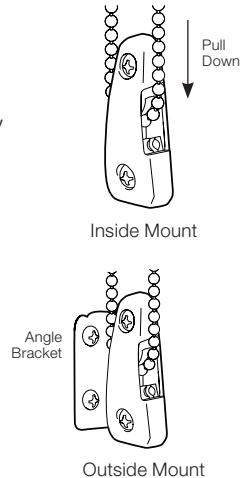

TRADITIONAL STYLE SHADES

1 Allow enough slack for the control loop to operate easily without stretching or pulling down on the loop; stretching the loop will cause excessive wear. Do not twist or cross the cord loop.

2 Hold the device upright so that the chain is straight and in the desired position. With flat side of device flush against the wall or window casing, install device with the two long wood screws.

