



# Natural Wallcovering

## INSTALLATION ADDENDUM

Please be advised, this addendum pertains to the wallcoverings listed below, and is meant to assist in tandem with our full installation instructions for natural, handcrafted wallcoverings located on the reverse side of our packaging or at [hartmannforbes.com](http://hartmannforbes.com)

### SEABOARD SERIES

WL414-36 Pier | shown  
WL414-03 Cape  
WL414-12 Landing

### RIVERFRONT SERIES

WL415-03 Sail  
WL415-36 Mooring

### CHARACTERISTICS OF SPECIALTY WALLCOVERING


- These wallcoverings are handwoven and hand-finished. There will be irregularities in the weave and the finish.
- The thickness of each is inconsistent and will not line up horizontally or vertically.
- Due to the thickness of this paper, please use an appropriate wallcovering cutting blade.
- No side-match.



Designer: Tish Mills | Photographer: Chris Little

### INSTALLATION INSTRUCTIONS

- Hang wallcovering as it comes off the roll — do not reverse hang (*see illustration at right*).
- Make a note on each strip to indicate the TOP. Stay consistent in aligning pieces with the TOP as the header.
- Warp filaments may need to be trimmed at top or bottom.
- To press down seams, use a soft bristle brush, i.e. horsehair brush. Seam roller not recommended, as it may damage wallcovering.

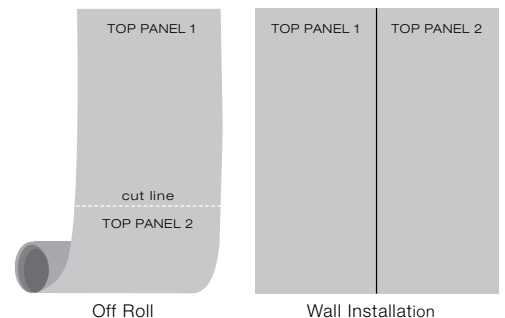

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at [hfc@hartmannforbes.com](mailto:hfc@hartmannforbes.com)  
HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

**HARTMANN&FORBES®**

©2016 Hartmann&Forbes Inc.