



Natural Wallcovering

INSTALLATION ADDENDUM – CATHEDRAL

Please be advised, this addendum pertains to the wallcoverings listed below. It is meant to be used in tandem with our full installation instructions for natural, handcrafted wallcoverings located on the reverse side of this sheet or at hartmannforbes.com/install

CATHEDRAL SERIES


WL423-03 White Gold	WL423-18 Copper
WL423-09 Gilded	WL423-36 Silver
WL423-15 Pewter	WL423-39 Bronze

CHARACTERISTICS OF SPECIALTY WALLCOVERING

- Each piece of cork is layered onto the wallcovering by hand and then printed.
- Cathedral wallcovering installs beautifully when taking some care.

INSTALLATION INSTRUCTIONS

- Hang wallcovering as it comes off the roll — do not reverse hang (*see illustration at right*).
- Make a note on the back of each strip to indicate the TOP. Stay consistent in aligning pieces with the TOP as the header.
- DO use a soft smoothing brush and brush lightly, or smooth softly with your hands.
- DO softly use a seam roller.
- DO NOT use a hard flat smoothing tool.
- If a piece of cork should peel away from the backing, use 3M Crazy Glue to gently glue back in place.

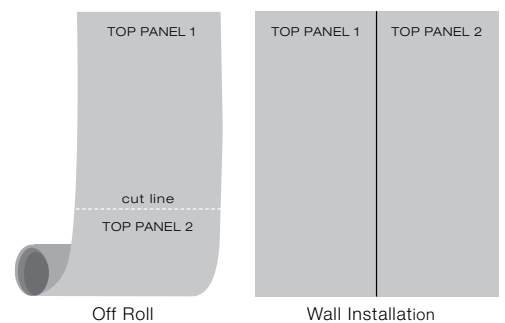

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at hfc@hartmannforbes.com

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

HARTMANN&FORBES®

©2017 HARTMANN&FORBES INC. INWALLCATH517