



# Natural Wallcovering

## INSTALLATION ADDENDUM – MADELEINE

Please be advised, this addendum pertains to the wallcoverings listed below, and is meant to assist in tandem with our full installation instructions for natural, handcrafted wallcoverings located on the reverse side or at [hartmannforbes.com/installation-instructions](http://hartmannforbes.com/installation-instructions)

### MADELEINE SERIES

WLMS77-30 Linden

WLMS77-55 Teal

WLMS77-54 Sage

### CHARACTERISTICS OF SPECIALTY WALLCOVERING


These wallcoverings are handwoven and hand-finished. There will be irregularities in the weave and the finish.

### INSTALLATION INSTRUCTIONS

1. Wallcovering is 36" wide with untrimmed edges, and will require cutting a precision edge.
2. Pay special attention to embroidered trim lines that will match side-to-side. Cut accordingly.
3. Trim edges with a very sharp razor blade. Change your blades often.



Untrimmed

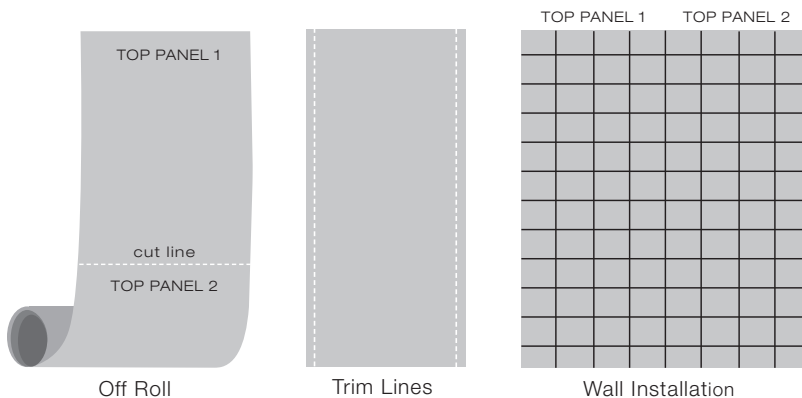

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at [hfc@hartmannforbes.com](mailto:hfc@hartmannforbes.com)

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

**HARTMANN&FORBES®**