



Natural Wallcovering

INSTALLATION ADDENDUM – CATHEDRAL

Please be advised, this addendum pertains to the wallcoverings listed below. It is meant to be used in tandem with our full installation instructions for natural, handcrafted wallcoverings located on the reverse side of this sheet or at hartmannforbes.com/install

CATHEDRAL SERIES

WL423-03 White Gold

WL423-18 Copper

WL423-09 Gilded


WL423-39 Bronze

CHARACTERISTICS OF SPECIALTY WALLCOVERING

- Each piece of cork is layered onto the wallcovering by hand and then printed.
- Cathedral wallcovering installs beautifully when taking some care.

INSTALLATION INSTRUCTIONS

- Hang wallcovering as it comes off the roll — do not reverse hang (*see illustration at right*).
- Make a note on the back of each strip to indicate the TOP. Stay consistent in aligning pieces with the TOP as the header.
- DO use a soft smoothing brush and brush lightly, or smooth softly with your hands.
- DO softly use a seam roller.
- DO NOT use a hard flat smoothing tool.
- If a piece of cork should peel away from the backing, use 3M Crazy Glue to gently glue back in place.

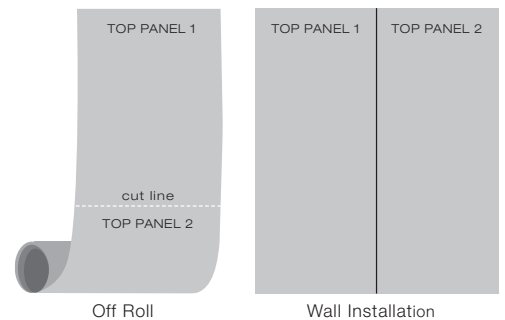

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at hfcr@hartmannforbes.com

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

HARTMANN&FORBES®

©2022 HARTMANN&FORBES INC. INWALLCATH722



Natural Wallcovering

INSTALLATION INSTRUCTIONS

Thank you for ordering Hartmann&Forbes Natural Wallcoverings. Please read the following instructions carefully before cutting or installing these wallcoverings. For best results, we recommend using a professional wallcovering installation expert.

INHERENT NATURAL VARIATIONS

- Hartmann&Forbes designs with best-in-class sustainable natural fibers. Each design is as individual and unique as the natural fibers from which it's made. Because of this, there are often slight irregularities.
- Fiber variances are inherent in natural wallcoverings and are not considered defects.
- Many of our wallcoverings are handcrafted from natural materials and finished with color washes. These materials are fragile. Exercise care in handling to avoid damage.
- Seams may be obvious upon installation; this panel effect is inherent with natural wallcoverings. Subtle shading differences between strips tend to soften over time.

BEFORE INSTALLATION

- If working around a light switch, turn off electricity.
- Store wallcovering in occupied temperature and humidity levels for three (3) days prior to installation to allow materials to acclimate.
- Inspect wallcoverings carefully, confirming that you have the correct weave, yardage and that all dye lots flow well together. When inspecting your cuts, do not actually cut the strips.
- Each wallcovering roll should be inspected for defects prior to installation.

TEST INSTALLATION

- Install three (3) strips and inspect again. If a defect is evident at this point, stop installation and contact Customer Relations for instructions on how to proceed. **No claims will be allowed for more than three (3) installed strips** and all claims must be made within 60 days of the shipping date.

WALL PREPARATION

- The building structure must be watertight and remain at occupied temperature and humidity levels for three (3) days prior, throughout and three (3) days following installation.
- Sand off any bumps to achieve the smoothest possible finish.
- Clean walls of dirt, soap, grease, loose or flaking paint, existing wallcoverings or like materials before hanging.
- We recommend preparing walls with good quality wallcovering primer that has been carefully and correctly applied. Primers must be completely dry prior to hanging wallcoverings.

INSTALLATION PART I – ADHESIVES

1. We recommend using a clear, pre-mixed, non-staining adhesive. Be sure to read the adhesive's label prior to use.
2. Do not add excessive water to the paste as it may cause the paper backing to pull away from the face of the wallcovering.
3. Apply the paste evenly to the back of the wallcovering, taking care not to get adhesive on face of wallcovering. Allow wallcovering paste to become tacky prior to hanging (timing will vary depending on the temperature and humidity of the room). Do not use a pasting machine.
4. Install wallcoverings one strip at a time. Reversing strips of grass patterns may help even the shading. However, we leave it up to the installer's discretion. With all wallcoverings, we suggest laying out the strips prior to hanging to determine the most even shading.

INSTALLATION PART II

PRETRIMMED WALLCOVERING

1. A finer seam may be achieved by double cutting the wallcovering during installation.
2. Trim edges with an extremely sharp razor blade; we suggest changing your blade often.

UNTRIMMED WALLCOVERING

1. This wallcovering comes with a selvage edge that will need to be pre-trimmed and will require cutting a precise edge on your work table. Trimmed width is 36" wide.
2. Trim edges while paper is dry.
3. Trim edges with a sharp razor blade; we suggest changing your blade often.

INSTALLATION PART III – SUGGESTIONS

1. Avoid damaging the face of the wallcovering by using a soft brush or cloth to hang the material. Never rub face of the product with a stiff brush or attempt to use a seam roller.
2. Do not allow paste or excessive water to come in contact with the front of the wallcovering. Both paste and excessive water will stain and/or change the color of the natural materials on the face of the wallcovering.
3. If wallcovering needs to be cleaned, gently vacuum using a dusting brush attachment.

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at hfc@hartmannforbes.com

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

HARTMANN&FORBES®

©2017 HARTMANN&FORBES INC. INWALL517