




Installation Instructions

SAFETY DEVICE

Shades should not be operated without the installation of the provided safety device detailed below. Anchoring devices to the wall or window casing, and proper usage, reduces the hazards of strangulation and entanglement of young children and pets by limiting access to the control loop.




SAFETY by DESIGN™

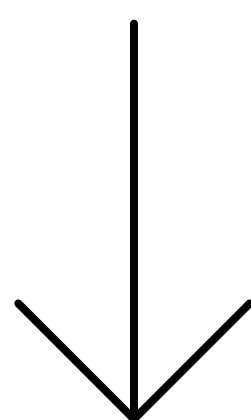

Tension Device for Clutch with Control Loop

INSIDE MOUNT

1 Pull plunger away from control loop. Lift control loop out of bead lock groove and slide tension device to bottom of loop.

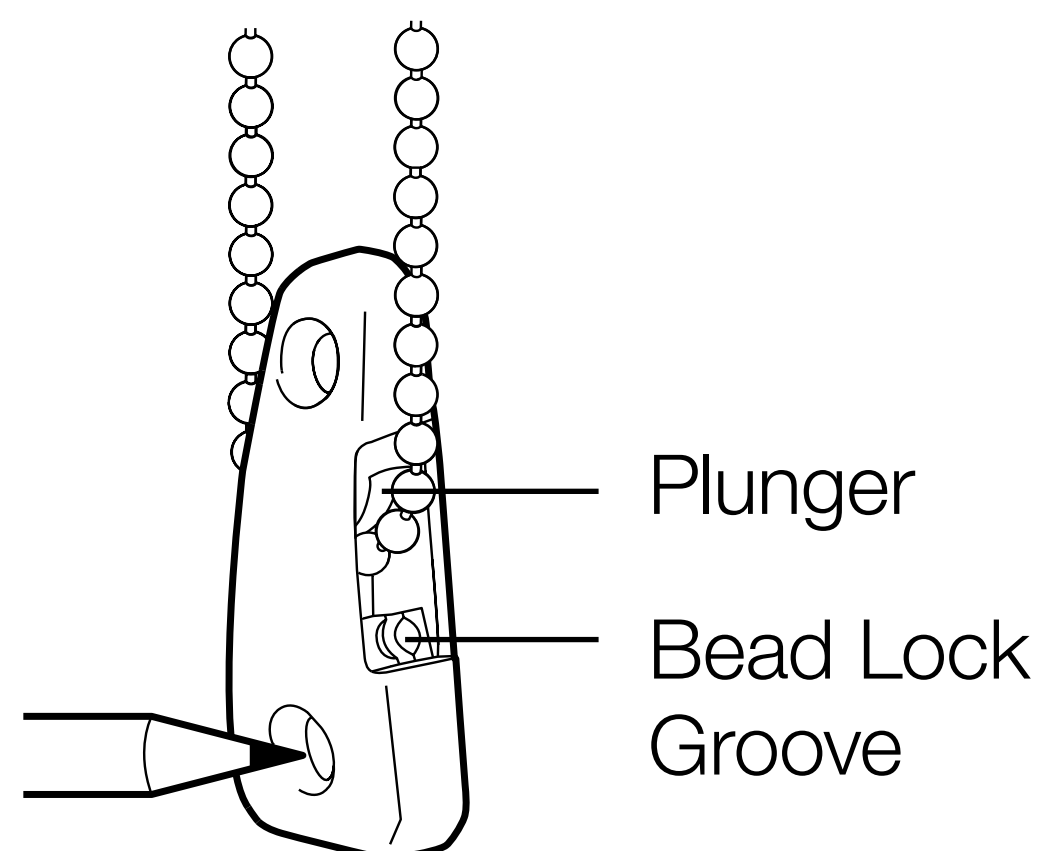

2 Holding control loop, pull tension device down until loop is taut and plunger spring is fully contracted. Then move tension device up approximately $\frac{1}{8}$ " to relieve stress on control loop. Do not twist or cross the loop.


3 Mark screw holes through the tension device on window casing.

4 With flat side of tension device flush against the wall or window casing, sink pilot holes and install device with two provided long wood screws.

Tension Device for Clutch with Control Loop

OUTSIDE MOUNT

1 Pull plunger away from control loop. Lift control loop out of bead lock groove and slide tension device to bottom of loop.

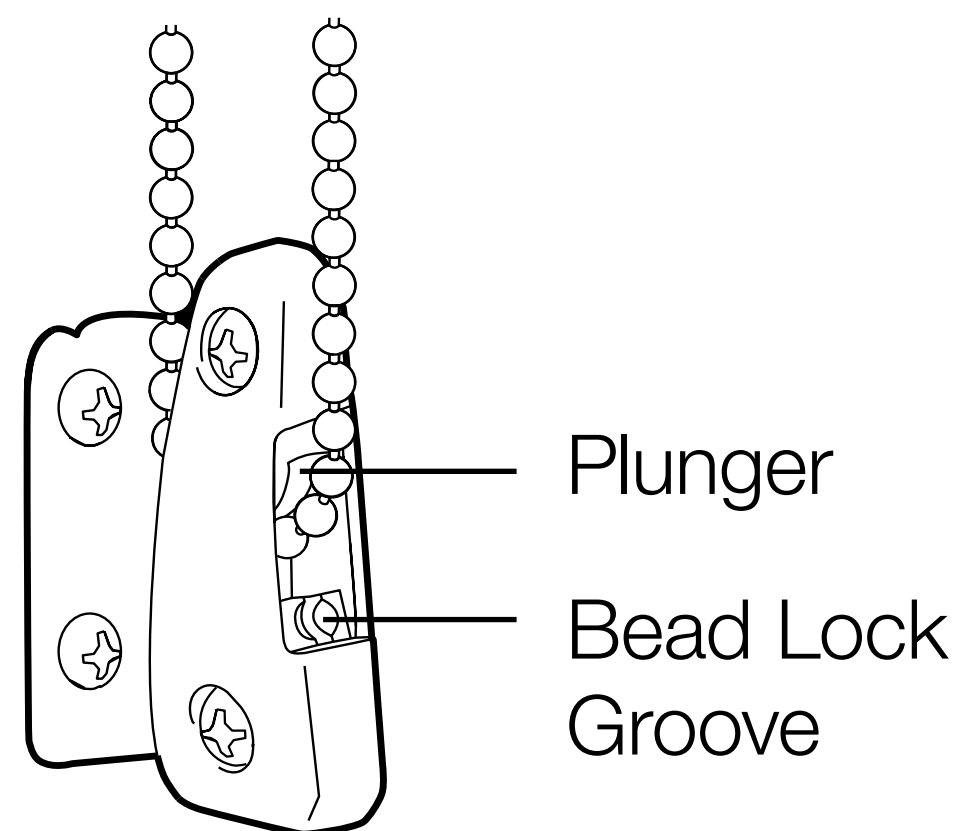

2 Holding control loop, pull tension device down until loop is taut and plunger spring is fully contracted. Then move tension device up approximately $\frac{1}{8}$ " to relieve stress on control loop. Do not twist or cross the loop.

3 Mark screw holes through the tension device on window casing, wall or door.

4 Align mounting bracket with markings and sink pilot holes.

5 Install mounting bracket using two provided long wood screws and appropriate fasteners.

6 Holding control loop, pull tension device down until loop is taut and plunger spring is fully contracted. Then move tension device up approximately $\frac{1}{8}$ " to relieve stress on control loop. Do not twist or cross the loop.