


## TOP TREATMENT

When placing your order, specify the inside box dimensions. Overall width and depth may vary due to bamboo or material size variations.



### INSIDE MOUNT (IS)

- Top Treatment will be mounted inside the window casing
- **Width:** Measure the EXACT width of the window at the top
- The finishing facility will make the necessary deduction for proper fit

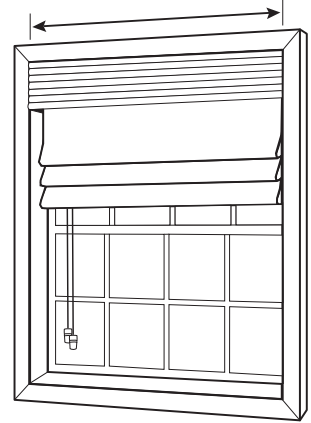

### OUTSIDE MOUNT (OS)

- Top Treatment will be mounted outside the window frame covering the top of the window casing
- **Width:** Measure the EXACT width of the top of the window frame. Allow enough overlap to clear the window casing
- **Roman shade:** Add minimum of 1" width
- **Drapery:** Add minimum of 1½" width
- **Panelscreen:** Add minimum of 1" width

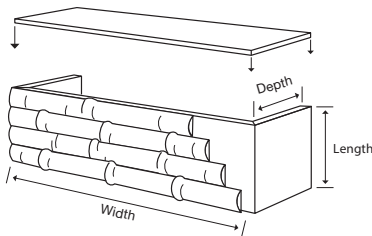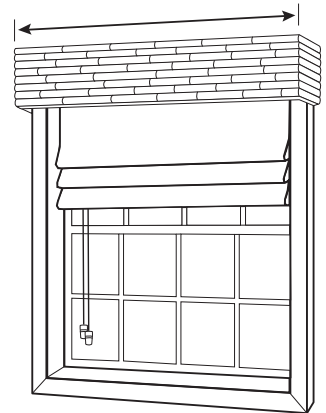


## Mitered

**Corner Window:** Send a template of each angle by stapling two business cards together (required)

**Bay Window:** Provide backwall dimensions (ABC) and overall width of bay (D). We will make any necessary deductions for proper shade operation. The headrails on bay windows will not be mitered, unless otherwise specified

**NOTE:** Traditional Style mitered roman shades cannot be raised to the same level simultaneously and horizontal alignment is not guaranteed. Old Style roman shades are highly recommended for mitered roman shades to allow for proper shade operation

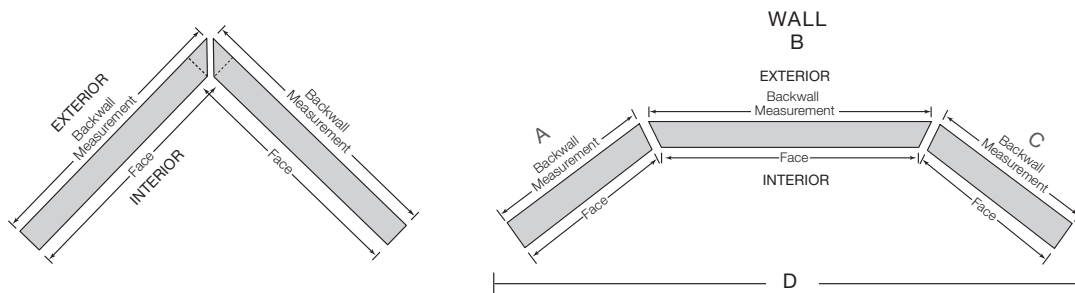

ATTACH DIAGRAM TO ORDER