

ROLLERSHADES

Inside Mount (IS)


WIDTH Measure the EXACT width of the window in three (3) places. Use the narrowest dimension. The finishing facility will make the necessary deductions for proper shade operation

LENGTH Measure the EXACT length of the window in two (2) places. Use the shortest dimension

Outside Mount (OS)

WIDTH Measure the EXACT width of the window frame. Add a minimum overlap beyond the window frame of 3" in width (1½" on each side)

LENGTH Measure the EXACT length from the top of the window frame to the sill or the bottom of the window casing. Add a minimum overlap of 3"L (1½"L to each the top and the bottom) to accommodate for the moulding

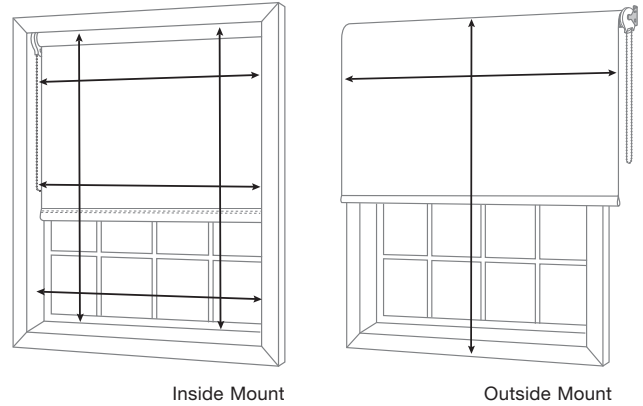


TOP TREATMENT

When placing your order, specify the inside box dimensions. Overall width and depth may vary due to bamboo or material size variations.

Inside Mount (IS)

- Top Treatment will be mounted inside the window casing
- **WIDTH** Measure the EXACT width of the window at the top
- The finishing facility will make the necessary deduction for proper fit

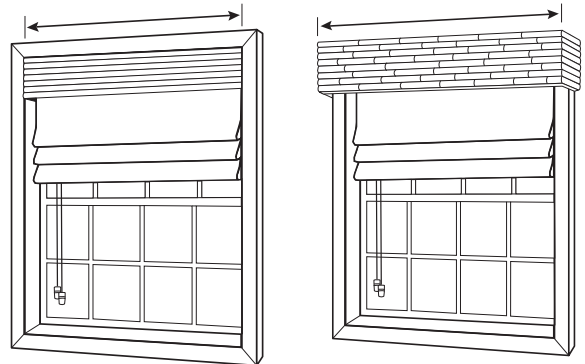

Outside Mount (OS)

- Top Treatment will be mounted outside the window frame covering the top of the window casing
- **WIDTH** Measure the EXACT width of the top of the window frame. Allow enough overlap to clear the window casing
- **ROMAN SHADE** Add minimum of 1" width
- **DRAPERY** Add minimum of 1½" width
- **PANELSCREEN** Add minimum of 1" width

