

ROLLERSHADES

Inside Mount (IS)


WIDTH: Measure the EXACT width of the window in three (3) places. Use the narrowest dimension. The finishing facility will make the necessary deductions for proper shade operation

LENGTH: Measure the EXACT length of the window in two (2) places. Use the shortest dimension


Outside Mount (OS) – Bracket to Bracket

WIDTH: Measure the EXACT width of the window frame. Add a minimum overlap beyond the window frame of 3" in width (1½" on each side)

LENGTH: Measure the EXACT length from the top of the window frame to the sill or the bottom of the window casing. Add a minimum overlap of 3"L (1½"L to each the top and the bottom) to accommodate for the moulding

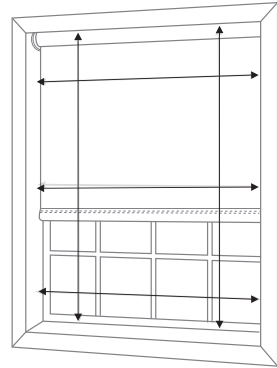

Inside Mount

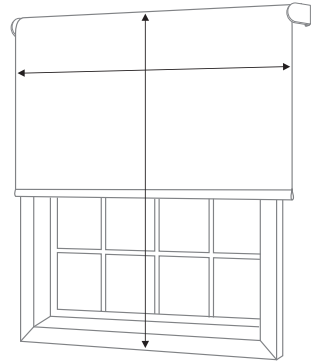

Outside Mount