




Top Treatment Measuring Guide

Inside Mount (IS)

- Top Treatment will be mounted inside the window casing
- **WIDTH:** Measure the EXACT width of the window at the top
- The finishing facility will make the necessary deduction for proper fit

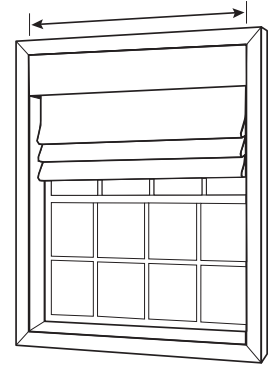

Outside Mount (OS)

- When placing your order, specify the inside box dimensions.
Overall width and depth may vary due to bamboo or material size variations.
- Top Treatment will be mounted outside the window frame covering the top of the window casing
- **WIDTH:** Measure the EXACT width of the top of the window frame.
Allow enough overlap to clear the window casing

