


Installation Instructions

TOP TREATMENTS




Flat Valance



Double Flat Valance




Structured Valance

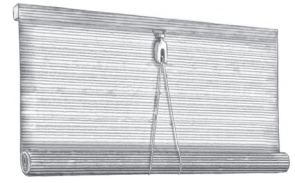


RollUp Valance




Faux-Roman Valance

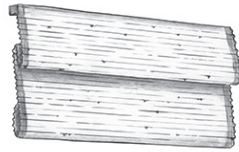

Double Hobbled Valance

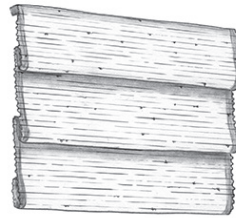

Triple Hobbled Valance

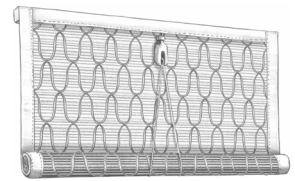

Chik Valance

Before You Begin

Please promptly remove Top Treatment from packaging to minimize creasing and wrinkling. Each Top Treatment is labeled to help match to window installation.

Order & Item Numbers

Style

Dimensions, Mounting

PACKAGE LABEL

100000-002	TOP TREATMENT: GRASSWEAVE	1 of 1 06/05/2019
1 SHADES USA	PO: 100000	SM: LIVINGSTON
FLAT VALANCE	MNT: OUTSIDE	LE1052 Elements Batiste
50 X 6		RM: LIVING
		HARTMANN & FORBES (TUA)
		TUALATIN, OR


Location

TOOLS REQUIRED

- Power Driver
- 1/2" Extension Hex or Phillips Bit
- Level
- Wall Fasteners
- Tape Measure
- 1/16" Drill Bit
- Pencil
- Pliers

INSTALLATION HARDWARE (included)

Quantity and type of hardware included depends on Top Treatment style, width and other specifications.

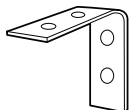

L-Brackets

#8 x 2" Wood Screws

#8 x 1 1/2" Wood Screws

#6 x 5/8" Wood Screws

WALL FASTENERS (not included)


Brackets and other hardware must be securely mounted to wall or other installation surface. Surfaces may vary so use appropriate fasteners.

Self-Drilling Anchor (drywall)

Molly Bolts (drywall)

Plastic Insert Plugs (drywall or plaster)


Toggle Bolts (drywall or lath & plaster)

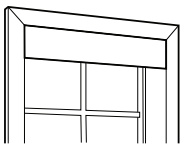


INSIDE MOUNT (IS)

- 1** Center the Top Treatment horizontally and flush with the front of the window jamb.


Flat Valance Shown

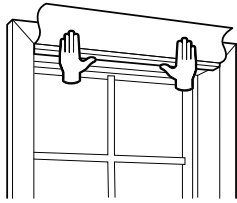



- 2** Locate the pre-drilled holes in the headrail. Mark holes in window casing. An "Installation Here" label indicates hole locations if headrail is fabric-wrapped.

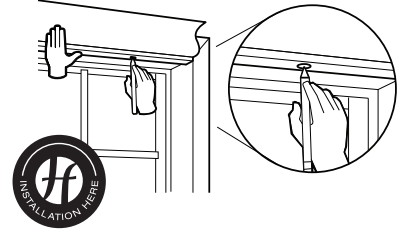

- 3** Using a 1/16" drill bit, sink pilot holes at marks in the window frame.

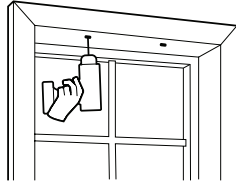


- 4** Align Top Treatment with pilot holes. Secure to window frame using #8 x 1 1/2" wood screws. Tighten center screw first to allow for adjustment.

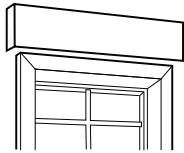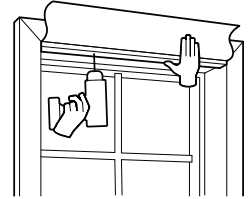


OUTSIDE MOUNT (OS)

- 1** Position the Top Treatment in the desired location, centered above the window. Make sure Top Treatment is level. Mark the wall along the bottom of the Top Treatment headrail where you will install the brackets with 24" between each bracket.


Structured Valance Shown

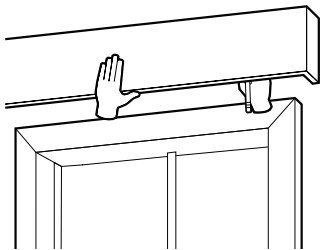


- 2** Starting at one side of the window, position bracket so that the top of the bracket aligns with bottom of mark. Mark bracket hole locations and sink pilot holes using 1/16" bit. Install using #8 x 1 1/2" wood screws and appropriate fasteners.

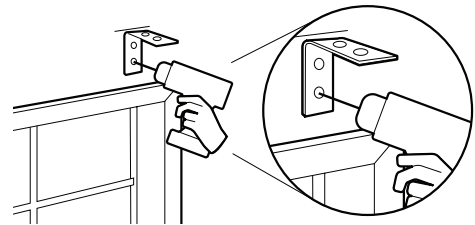

- 3** Working from one side of the window to the other, install remaining brackets. Use a level to ensure that each bracket is aligned with the first installed bracket.
NOTE: If installing a Roller or Roman shade under the Top Treatment, install shade onto brackets prior to moving on to step 4.

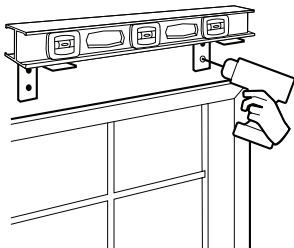


- 4** Place Top Treatment on brackets, then use #6 x 5/8" wood screws to secure the headrail to the brackets. Some Top Treatments will need to be mounted with the brackets above the headrail to allow proper operation of the shade installed within.

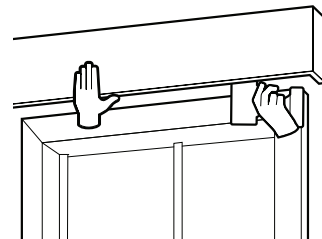

Chik Valance & RollUp Valance


Install valance following inside or outside mount installation instructions.

- Pull cord through wood pulley until shade is at desired height.
- Keeping tension on cord, wrap cord around cleat on underside of headrail in a figure 8 pattern.
- Secure cord by inserting end between wrapped section on cleat, pull to secure. Trim excess cord if position is to remain permanent.

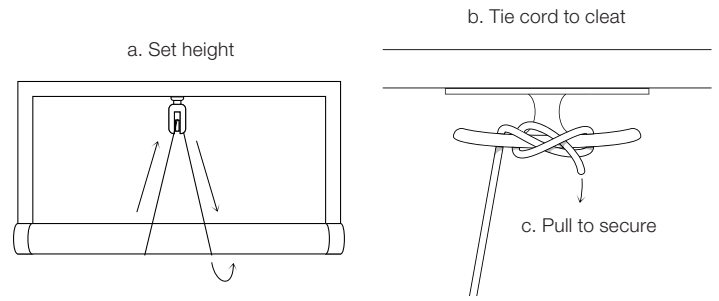

Side Returns

You'll find the side returns packaged on the belly band of the shade. Once shade is installed, attach the side returns on the end of the headrail using hook and loop fasteners.

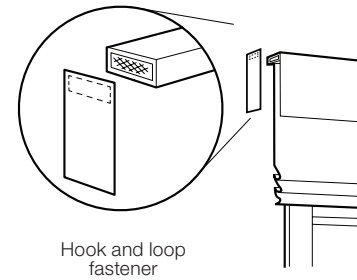

Care & Maintenance

- After receiving your windowcoverings, it is recommended that you promptly remove them from the box and install or hang to minimize creasing and wrinkling.
- Vacuum shades with an upholstery attachment to remove dust, hair or other airborne particles.
- Prolonged exposure to the elements will result in visible wear. It is recommended to open and close shades on a regular basis to help ensure they wear more evenly.
- Ensure windows are dry to protect shades from moisture caused by window condensation or rain. Prolonged exposure to moisture and extreme humidity will cause discoloration from mildew, which can be difficult to remove.
- In the event that wrinkling occurs, use a dry iron on a low setting, increasing the heat as needed. Do not exceed the medium heat setting or use steam.

Warranty

Hartmann&Forbes warrants to the original purchaser ("purchaser") that its windowcoverings ("products" or "the product"), when correctly installed and operated in strict accordance with the installation instructions, will be free from defects in materials and workmanship for FIVE (5) YEARS from the date of delivery (the "Warranty Period").

Subject to the following warranty exclusions, any products or parts determined to be defective during the Warranty Period will be repaired or replaced by Hartmann&Forbes at no-charge to the purchaser.

Motor and motor componentry not covered under Craftsmanship Limited Warranty, but is covered under motor manufacturer warranty. For specific coverage visit hartmannforbes.com.

NOT COVERED BY WARRANTY:

- Hartmann&Forbes products or parts which fail due to accident, alteration, improper use, abuse, neglect, normal wear, color-fading due to sunlight, atmospheric conditions, direct exposure to salt air or improper cleaning
- Any conditions or damage resulting from the removal of the product or reinstallation in the same or another window
- Inherent rippling, wrinkling and organic variations including knots and striations in Natural Windowcovering materials, which may be accentuated by artificial lighting
- Labor costs and expenses associated with measuring and installing replacement products, shipping, packaging and returning merchandise, except as may be authorized by Hartmann&Forbes in advance
- Hartmann&Forbes motor-ready windowcoverings
- Customer-provided motors and parts
- Hartmann&Forbes Natural Wallcoverings
- Hartmann&Forbes By-the-Yard Textiles

To obtain Warranty service, contact the showroom or distributor from which you purchased your Hartmann&Forbes product(s) and, if it is determined that your claim is subject to warranty, Hartmann&Forbes will promptly repair or replace any defective parts at no-charge. Charge-backs for repair or installation costs will not be honored unless authorized by Hartmann&Forbes in advance. Hartmann&Forbes retains the right to determine the appropriate method for repairing or remaking any product.

AS-IS; NO OTHER WARRANTIES: THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT THIS LIMITED WARRANTY. HARTMANN&FORBES EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

LIMITATION OF REMEDIES: HARTMANN&FORBES SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES EXCEPT AS SPECIFICALLY LISTED ABOVE, AND SHALL NOT BE LIABLE IN ANY CIRCUMSTANCE FOR SPECIAL, INDIRECT, PUNITIVE, OR EXEMPLARY DAMAGES OR LOST PROFITS OF ANY KIND WHETHER BASED ON CONTRACT, WARRANTY, NEGLIGENCE, PRODUCT LIABILITY OR ANY OTHER THEORY OF RELIEF RESULTING FROM OR ARISING IN ANY WAY FROM YOUR PURCHASE OR USE OF HARTMANN&FORBES PRODUCTS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may or may not apply to you.

If shade is damaged, the hardware is missing or if you need assistance please contact H&F at 888.582.8780 or email hfcf@hartmannforbes.com