


TOP TREATMENTS INSTALLATION INSTRUCTIONS

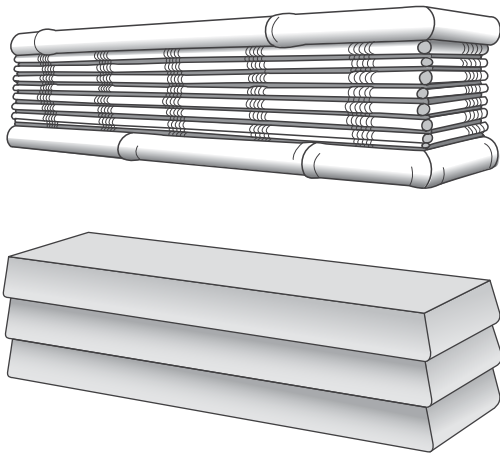


TOOLS REQUIRED

- Power Driver
- 1/4" Hex Bit or Phillips Bit
- 1/16" Drill Bit
- Pencil
- Tape Measure
- Level
- Appropriate Wall Fasteners

INSTALLATION HARDWARE (INCLUDED)

Quantity and type of hardware included depends on shade width and specifications.

- a. #8 x 1 1/2" Wood Screws
- b. #6 x 5/8" Wood Screws
- c. L Brackets

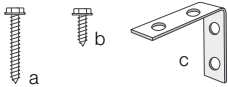


FASTENERS

Brackets and other hardware must be securely mounted to wall or other installation surface. Each installation surface is different and may require fasteners that are not provided. Please be sure to use appropriate fasteners for your situation.

Some common fasteners are:

- a. #8 Screws for Wood (provided)
- b. Plastic Insert Plugs (drywall or plaster)
- c. Self Drilling Anchor (drywall)
- d. Molly Bolts (drywall)
- e. Toggle Bolts (drywall, or lath & plaster)

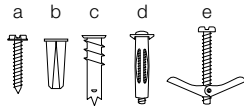

TOP TREATMENT INSTALLATION

OUTSIDE MOUNT (OS) INSTALLATION — L BRACKETS

1. Position the Top Treatment where you want it to hang on the wall above the window. Make sure it is centered over the window. Using a pencil, mark the wall along the bottom of the top treatment where you will install the brackets, 2" in from either side and every 24" in-between. Set aside.
2. Starting at one side of the window, position bracket so that the top of the bracket aligns with bottom of marks. Pre-drill pilot holes using 1/16" bit and install using #8 x 1 1/2" screws and appropriate fasteners, you may need a larger drill bit (figure 1).
3. Working from one side of the window to the other, install remaining brackets following step 2. Use a level to ensure that each bracket is aligned with the first bracket installed (figure 2).
4. Place Top Treatment on L bracket, then use supplied #6 x 5/8" wood screws to screw up through bracket holes into header (figure 3).

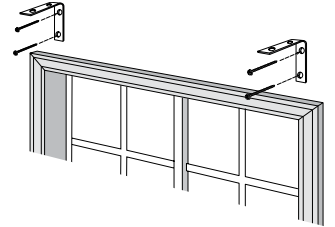


figure 1

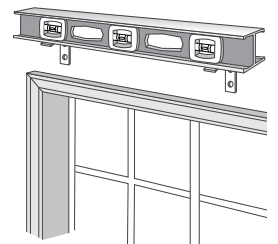


figure 2

Note: Some top treatments will need to be mounted with the L bracket attached to the top of the header to allow proper operation of a shade installed inside the top treatment.

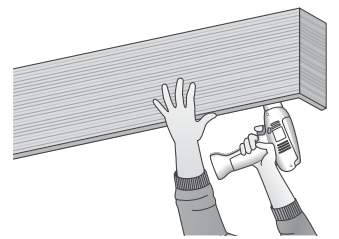


figure 3

INSIDE MOUNT (IS) INSTALLATION

1. Position the top treatment into its desired location within the window casing.
2. Secure top treatment in place by anchoring directly into the window casing using the #8 x 1 1/2" screws provided. Use the 1/16" drill bit to drill pilot installation holes if desired.

HARTMANN & FORBES®

888.582.8780 | hartmannforbes.com